

## Vodavi STS Programs

**System Reset**

**Page 2-260**

**Flash 80**

**Button 20**

---

**Card Slots**

**Page 2-51**

**Flash 24**

**Press DSS button corresponding to slot number (DSS1=Slot1)**

**Codes are : Also \*\*\*\* RESET SYSTEM AFTER CHANGES**

**00=None No Circuit Board in Slot**

**02=DTIB = 8 Port Digital Station Card**

**13=SL04 = 4 Port Analog Station Card**

**15=LCI4 = 4 Port CO Line Card**

**17=VM1B Flash Based Voice Mail**

**18=VM2B Pentium Based Voice Mail**

---

**Database Administration**

**Page 2-103**

**Flash 50 and Button 24 is lit**

**Enter station range and HOLD or Hold for all stations**

**Button 19 is now lit**

**Press Button 18 (ADMIN ACCESS)**

**Dial 1 to Enable or 0 to Disable**

---

**CO Line Incoming Ringing Assignment**

**Page 2-73**

**Flash 40**

**Enter CO range (001 - 024) and HOLD or HOLD for all CO's**

**Press Button 10, Enter DDDR (ext # + ring type)**

**Ring Types:**

**0=No Ring or Delete Ring**

**1=Day**

**2=Night**

**3=Day & Night**

**4=Special --- activated when DND button on Attendant is FLASHING**

**5=Day & Special**

**6=Night & Special**

**7=All Modes (Day & Night & Special)**

**Ring Delay Timer for Caller ID**

**Page A-8**

**Flash 40**

**Enter CO range (001 - 024) and HOLD or HOLD for all CO's**

**Press Button 21 for Page C**

**Press Button 2 (RING DELAY TIMER)**

**Enter valid number of seconds (00-20) Usually set for 5 seconds**

-----

**CO Line Incoming Ringing Assignment Display**

**Page 2-**

**77**

**Flash 40**

**Enter CO range (001 - 024) and HOLD or HOLD for all CO's**

**Button 19 is lit**

**Press Button 13 to display first 6 ring assignments, repeat to cycle next group of 6 assignments.**

**XDDDDRR Format**

**XDDDD=**

**F=Fixed Ext#, H=Hunt Grp, M=Modem Ext#, S=Sta #, U=UCD Grp**

**V=VM Grp, B=Speed Bin#**

**RR=**

**0=No Ring, D=Day, N=Nite, DN=Day/Nite, S=Special, DS=Day/Special, NS=Nite/Special, A=All Modes**

-----

**Preset Call Forward – Station to Voice Mail**

**Page 2-**

**33**

**Flash 50 and Button 24 is lit**

**Enter station range and HOLD or Hold for all stations**

**Button 19 is now lit**

**Press button 21 for Page C**

**Button 1=Internal No Answer Destination (set to 440 for VM)**

**Button 2=Internal Busy Destination (set to 440 for VM)**

**Button 3=External No Answer Destination (set to 440 for VM)**

**Button 4=External Busy Destination (set to 440 for VM)**

**Button 5=No Answer Timer (Global) 00-99 Seconds**

**Preset Call Forward CO Line**

**Page 2-35**

**Flash 40**

**Enter CO range (001 - 008) and HOLD or HOLD for all CO's**

**Button 19 is lit**

**Press Button 20 for Page B**

**Press Button 5 (PRESET FWD DESTINATION)**

**Enter a valid destination**

**9020-9099=System Speed Dial**

**100-149=Station Exts**

**440-447 Voice Mail Grps 1-8**

**450-457=Hunt Grps 1-8**

**550-557=UCD Grps 1-8**

---

**Preset Forward Timer - Incoming Call to a Destination** **Page 2-37**

**Flash 40**

**Enter CO range (001 - 008) and HOLD or HOLD for all CO's**

**Press Button 21**

**Press Button 8 (Preset FWD Timer)**

**Enter 00-99 Seconds**

---

**System Hold Recall Timer**

**Page 2-164**

**Flash 01**

**Button 1**

**Dial 000- 300 Seconds**

**000=Disable Timer**

---

**Light Control**

**Page 2-186**

**Flash 50 and Button 24 is lit**

**Enter station range and HOLD or Hold for all stations**

**Button 19 is now lit**

**Press button 20 for Page B**

**Press Button 15 (Light Control)**

**Enter a valid number 0-4**

**0=None**

**1=Incoming Ringing**

**2=Voice Mail**

3=Message Waiting  
4=Headset

### **Off Hook Preference**

**Page 2-225**

**Flash 50 and Button 24 is lit**

**Enter station range and HOLD or Hold for all stations**

**Button 19 is now lit**

**Press button 20 for Page B**

**Press Button 10 (OFF-HOOK PREF)**

**Enter a valid button number (01-24) or 00 for no specific button**

**Enter a 0 to stop users from changing the preference**

**Enter a 1 to allows users to change the preference (use this)**

**Note:**

**Single Line Telephones:**

**Enter 011 to Enable**

**Enter 000 to Disable**

-----

### **Flexible Button Assignment**

**Page 2-149**

**Flash 50 and Button 24 is lit**

**Enter station range and HOLD or Hold for all stations**

**Button 19 is now lit**

**Press button 20 for Page B**

**Press Button 11 (BUTTON ASSIGN)**

**Enter a valid button number (00-24)**

**Enter:**

**0=Flexible Button**

**1=CO Line Button (001-024)**

**2=Loop Button**

**3=Pool Button (Group 1-8)**

**4=Direct Feature Button + Feature Code**

**4=DSS/BLF Button + Ext #**

**OR**

**To assign a SPECIFIC CO Line to a SLT (with Off Hook Preference)**

**Enter 011 + (CO Line # 001-024) then HOLD**

**To assign a CO Line Group to a SLT (with Off Hook Preference)**

**Enter 013 + (CO Line Group # 01-23) then HOLD**

**CO Line Group Access – Station**

**Page 2-69**

**Flash 50 and Button 24 is lit**

**Enter station range and HOLD or Hold for all stations**

**Button 19 is now lit**

**Press button 20 for Page B**

**Press Button 8 (CO LINE GROUP ACCESS)**

**To add a group dial the Group Number (01-23) then 1**

**To delete a group dial the Group Number (01-23) then 0**

---

**CO Line To Group Programming**

**Page 2-70**

**Flash 40**

**Enter CO range (001 - 024) and HOLD or HOLD for all CO's**

**Button 19 is lit**

**Press Button 8 (CO LINE GROUP)**

**Enter a valid GROUP NUMBER (0-23)**

---

**Executive Override - Enable/Disable**

**Page 2-140**

**Flash 50 and Button 24 is lit**

**Enter station range and HOLD or Hold for all stations**

**Button 19 is now lit**

**Press Button 4 (EXECUTIVE OVERRIDE)**

**Enter a 1 to Enable or a 0 to Disable**

**Note:**

**Assign an Executive Override button (code 625) on station**

---

**Executive Override Blocking**

**Page 2-142**

**Flash 50 and Button 24 is lit**

**Enter station range and HOLD or Hold for all stations**

**Button 19 is now lit**

**Press Button 13 (EXECUTIVE OVERRIDE BLOCK)**

**Enter a 1 to Enable or a 0 to Disable**

---

**Executive Override Warning Tone On/Off**

**Page 2-143**

**Flash 05**

**Press Button 4**

**Enter a 1 to Enable or a 0 to Disable  
Barge-In Warning Tone On/Off  
Flash 06  
Press Button 1  
Enter a 1 to Enable or a 0 to Disable**

---

**Page 2-144**

**External Day Ring Thru External Page  
Flash 06  
Press Button 5  
Enter a 1 to Enable or a 0 to Disable**

**Page 2-146**

**Note: Co Line(s) Must Be Set To UDA  
Flash 40  
Enter CO range (001 - 024) and HOLD or HOLD for all CO's  
Press Button 7  
Enter 1 to Enable  
Enter 0 to Disable**

---

**Page 2-288**

**External Nite Ring Thru External Page  
Flash 05  
Press Button 3  
Enter a 1 to Enable or a 0 to Disable**

**Page 2-147**

**Note: Co Line(s) Must Be Set To UNA  
Flash 40  
Enter CO range (001 - 024) and HOLD or HOLD for all CO's  
Press Button 3  
Enter 1 to Enable  
Enter 0 to Disable**

**Page 2-289**

**Headset Mode**

**Page 2-159**

**Flash 50 and Button 24 is lit**

**Enter station range and HOLD or Hold for all stations**

**Button 19 is now lit**

**Press button 20 for Page B**

**Press Button 18 (Display Buttons)**

**Enter a 0 for normal handset jack**

**Enter a 1 for 2.5mm jack (this is the Headset Jack)**

**Note: YOU MUST ALSO PROGRAM THE SPEAKERPHONE OPTION**

**Flash 50 and Button 24 is lit**

**Page 2-234**

**Enter station range and HOLD or Hold for all stations**

**Button 19 is now lit**

**Press Button 20 for Page B**

**Press Button 4 (Speakerphone)**

**Enter 2 to toggle speakerphone/headset with feature 634**

**Note - Assign a button with code 634 for headset control** **Page 2-149**

---

**Off-Hook Voice Over**

**Page 2-200**

**Flash 50 and Button 24 is lit**

**Enter station range and HOLD or Hold for all stations**

**Button 19 is now lit**

**Press Button 9 (OHVO)**

**Enter a 1 to Enable or a 0 to Disable**

---

**Paging Zones**

**Page 2-208**

**Flash 50 and Button 24 is lit**

**Enter station range and HOLD or Hold for all stations**

**Button 19 is now lit**

**Press button 20 for Page B**

**Press Button 6 (Page Zone)**

**Enter zone 1-8**

**Preferred Line Answer**

**Page 2-215**

**Flash 50 and Button 24 is lit**

**Enter station range and HOLD or Hold for all stations**  
**Button 19 is now lit**  
**Press Button 8 (PREF LINE ANSWER)**  
**Enter a 1 to Enable or a 0 to Disable**

---

**Relay Programming**

**Page 2-222**

**Flash 14**

**Button 1**

**Enter code**

**1 + (1) = External Page Zone**

**2 + (1-8) = RAN Start**

**3 + STA# = Loud Bell**

**4 + CO# = CO Line Control**

**0 = Disables Relay**

**Ringback On Transfer**

**Page 2-47**

**Flash 06**

**Button 11**

**Enter a 1 to Enable or a 0 to Disable**

**Station Identification (Console)**

**Page 2-245**

**Flash 50 and Button 24 is lit**

**Enter station range and HOLD or Hold for all stations**

**Button 19 is now lit**

**Press button 20 for Page B**

**Press Button 8 (STATION ID)**

**Enter a valid digit**

**0 = STS 24 Phone**

**1-3 = DSS Console with map 1-3 (use 2) + associated STA #**

**6 = SLT without Msg Waiting**

**7 = SLT with MSG Waiting (90VDC)**

**015 = SLA**

**Note-When redesignating from SLA to STS you must enter 000**

**Attendant Station Assignment**

**Page 2-15**

**Flash 10**

**Enter additional (3 total) Attendant Station numbers  
Ext Number + 1 to add  
or  
Ext Number + 0 to delete**

---

**Toll Restriction STATION DAY MODE**

**Page 2-277**

**Flash 50 and Button 24 is lit  
Enter station range and HOLD or Hold for all stations  
Button 19 is now lit  
Press button 20 for Page B  
Press Button 2 (Day Class Of Service)  
Dial 5 for Canned Restriction  
No 0, 1+, 411, 976, 555 allowed as 1<sup>st</sup> digit. Also limits to 7 digits.  
911, 1-800, 1-866, 1-877, 1-888, 1-911, 1-611 ARE ALLOWED**

---

**Toll Restriction STATION NIGHT MODE**

**Page 2-277**

**Flash 50 and Button 24 is lit  
Enter station range and HOLD or Hold for all stations  
Button 19 is now lit  
Press button 20 for Page B  
Press Button 3 (Night Class Of Service)  
Dial 5 for Canned Restriction  
No 0, 1+, 411, 976, 555 allowed as 1<sup>st</sup> digit. Also limits to 7 digits.  
911, 1-800, 1-866, 1-877, 1-888, 1-911, 1-611 ARE ALLOWED**

---

**Voice Mail Info**

**Erase prompt 091 “If you have a mailbox on this system, press #”**

**Erase Prompt 106 “Enter the extension number of the party you are calling. To dial by name, dial 4”**

**This will eliminate these prompts from being played after the Main Greeting is played.**